

LIBRARY OF THINGS

AGES
12+



GOPRO ADVENTURE KIT

INSTRUCTIONS

For more information
and instructions,
please scan QR code. ↓



Hobsons Bay
COUNCIL+

Hobsons Bay
LIBRARIES

**HOBSONS
BAY CITY
COUNCIL**



WHAT'S IN THIS KIT?

- 1 x GoPro Camera and carrying case
- 1 x GoPro Camera Enduro battery
- 1 x USB-C charging cable
- 1 x GoPro clear protective case
- 1 x Curved quick clip
- 1x Mounting buckle and thumb screw
- 1 x Floating hand grip
- 1 x Head strap



1 x GoPro Camera



1 x GoPro clear protective case



1 x Curved quick clip



1 x GoPro floating handle



1 x GoPro mounting buckle



1 x GoPro camera Enduro battery

BEFORE RETURNING

 
Please reset GoPro Camera settings to initial set up. To do this turn on camera and Swipe DOWN from main screen, then swipe LEFT to find the Preferences menu. Down the bottom of the list, you will see an option to Reset, then select "Factory reset"

Please remove mini SD card from GoPro Camera

Please ensure all parts and returned in good condition with kit

This item **MUST BE** returned to the library desk during branch opening hours.

DO NOT RETURN VIA THE RETURN CHUTE

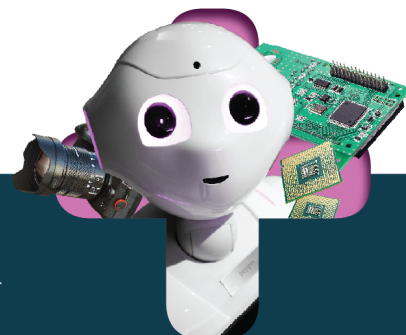

WHAT YOU NEED:

A micro SD card (to record your content onto)

ACCESSORIES OVERVIEW

GoPro Protective Case: protects your Camera from mud, dirt and debris during extreme activities

Curved QuickClip: lets you attach your GoPro to baseball caps, belts and more

Mounting Buckle and Thumb Screw: for attaching to tripod mounts

Floating Hand Grip (The Handler): is great for handheld shots

Head Strap: helps capture ultra-immersive shots from your point of view

Microphones & Speakers

The Go Pro has three microphones

- One on the front
- One on the top
- One on the side (underneath the power button)

The speakers are located at the bottom of the GoPro (underneath the mounts).

STANDARD CAMERA PRESETS

Aspect Ratio: 16:9 is a good standard shot size

Resolution: 4K is good quality without taking up too much storage space

Frame Rate: 30 is good for anything you are shooting for Realtime playback. If you are intending to film something to be slowed down 60+ will allow it to be slowed down while maintaining quality

Lens: This will depend on what you are shooting, but wide/linear is a good default. Linear + Horizon lock can be helpful when the filming might be shakey

Hyper-Smooth: These settings while helping stabilise your video

Hindsight: If filming more adhoc sequences, this can be useful to capture those moments before you hit record

Shutter Speed: Leave as auto

EV Comp: Leave as 0

White Balance: Leave as auto

 
ISO Min/ISO Max: ISO Min set at lowest/ISO Max set at highest setting

Sharpness: Medium

Colour: Flat

RAW Audio: Off

Wind Reduction: Use only if needed

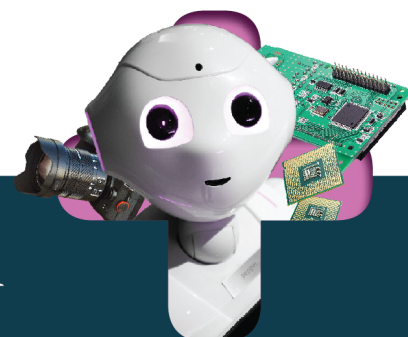

SET UP GOPRO:

1. Open up latch on side (opposite to power button) and insert the battery
2. Insert the micro SD Card (slot is located to the side of the battery) gently place in slot - to remove card, slightly depress card using your fingernail to eject it
3. Power ON the Camera using button on the side (you should hear a few beeps as it turns on)
4. You are now ready to film

HOW TO START FILMING (quick start guide)

- After your camera is turned ON, you are now ready to shoot
- You will not be able to shoot while the USB is connected (ensure you have charged up before using)

If this is the first time turning on the camera you may need to select (this is done by tapping the screen)

- Language
- "Agree" to the legal terms and conditions
- Allow (or not) access to tag your footage with a location
- You will be prompted to connect your camera to the GoPro Quik App (this is not needed) pressing the back button will allow you to continue without
- Then select the timezone
- Register daylight saving times
- Set the date
- Set the time

Once the camera is set up

- Select either Time Lapse, Video of Camera by swiping the main screen left or right
- Simply press the record button at the top of the camera to start recording (or take a photo)
- Press the button again to stop recording

MAIN SCREEN ICONS AND LAYOUT

Top left: How much time you have left to record on your mini SD Card in mins

Top Middle: Current recording mode (Video, Camera, Time Lapse)

Top Right: Battery level in %

 
Middle Left: Filter/Timer

Bottom Left: Lens Type

Bottom Middle: Camera/Setting Presets you can select to match what you are filming. You can edit these as well as add your own

Bottom Right: Timer/Speed

If you want to remove all the icons from the screen, tap the middle and they will disappear from both screens (front and back)

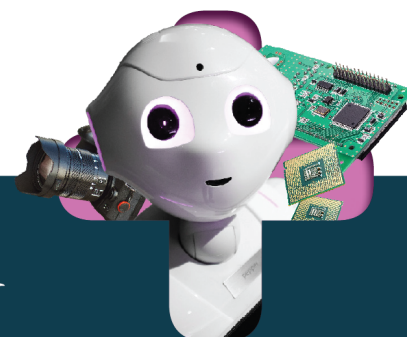

SETTINGS AND PREFERENCES MENU:

Access this menu by swiping DOWN from the main view. Items are activated when they are highlighted blue

- **Voice Control:** This can be turned on or off (commands are located in preferences menu if you swipe to the left)
- **Beeps** (musical note): Can be turned on or off
- **Quick Capture** (rabbit icon): Can be turned on or off (so you can press the record button and start recording immediately even when the GoPro is off).
- **Lock:** Screen lock on or off
- **Front screen options:** Allows you to select what you want shown on the front screen of the GoPro
- **Orientation Lock:** Can be turned on and off (if you want the screen to stay locked to the same orientation or change as you move the camera)

If you swipe left you will then see some additional settings and preferences

- **Video Mode:** Highest to lowest video quality
- **Controls:** Change from Easy to Pro

THE PREFERENCES MENU

- **Auto upload:** Allows you to upload your files automatically (need Quik app to use this)
- **Wireless connections:** Allows you to connect to wireless networks
- **General:** Volume control, Default presets, auto power off, Anti-Flicker etc
- **GPS:** Will allow you to tag your footage with a location, speed and/or altitude
- **Voice Control:** Allows you to adjust prompts and settings if you wish to use this feature
- **Displays:** Settings relating to the screen displays (eg: power saver, orientation, screen grid and brightness)
- **Date/Language:** Make adjustments for the time or date

SETTINGS CHEAT SHEET:

Additional information on GoPro settings can be found here



TROUBLESHOOTING AND SUPPORT

There is an excellent collection of support documents and videos here



We'd love to see your stories!
Tag us on Instagram and Facebook



@hobsonsbaylibraries

#libraryofthings

STEAM TECHNOLOGIES

